

**Таблица канальных частот LPD.**

КАНАЛ	ЧАСТОТА (МГц)	КАНАЛ	ЧАСТОТА (МГц)	КАНАЛ	ЧАСТОТА (МГц)
1	433.075	24	433.650	47	434.225
2	433.100	25	433.675	48	434.250
3	433.125	26	433.700	49	434.275
4	433.150	27	433.725	50	434.300
5	433.175	28	433.750	51	434.325
6	433.200	29	433.775	52	434.350
7	433.225	30	433.800	53	434.375
8	433.250	31	433.825	54	434.400
9	433.275	32	433.850	55	434.425
10	433.300	33	433.875	56	434.450
11	433.325	34	433.900	57	434.475
12	433.350	35	433.925	58	434.500
13	433.375	36	433.950	59	434.525
14	433.400	37	433.975	60	434.550
15	433.425	38	434.000	61	434.575
16	433.450	39	434.025	62	434.600
17	433.475	40	434.050	63	434.625
18	433.500	41	434.075	64	434.650
19	433.525	42	434.100	65	434.675
20	433.550	43	434.125	66	434.700
21	433.575	44	434.150	67	434.725
22	433.600	45	434.175	68	434.750
23	433.625	46	434.200	69	434.775

**Таблица канальных частот PMR.**

КАНАЛ	ЧАСТОТА (МГц)
PMR-1	446.00625
PMR-2	446.01875
PMR-3	446.03125
PMR-4	446.04375
PMR-5	446.05625
PMR-6	446.06875
PMR-7	446.08125
PMR-8	446.09375

**Таблица канальных частот FRS/GMRS.**

КАНАЛ	ЧАСТОТА (МГц)	КАНАЛ	ЧАСТОТА (МГц)
FRS-1	462.5625	FRS-12	467.6625
FRS-2	462.5875	FRS-13	467.6875
FRS-3	462.6125	FRS-14	467.7125
FRS-4	462.6375	GMRS-15	462.5500

FRS-5	462.6625	GMRS-16	462.5750
FRS-6	462.6875	GMRS-17	462.6000
FRS-7	462.7125	GMRS-18	462.6250
FRS-8	467.5625	GMRS-19	462.6500
FRS-9	467.5875	GMRS-20	462.6750
FRS-10	467.6125	GMRS-21	462.7000
FRS-11	467.6375	GMRS-22	462.7250

**радиоканалы LPD 8-канальных станций LPD ( скобках указаны каналы 69-канальных станций LPD)**

КАНАЛЫ	ЧАСТОТА (МГц)
1 (1)	433.075
2 (2)	433.100
3 (6)	433.200
4 (10)	433.300
5 (12)	433.350
6 (17)	433.475
7 (23)	433.625
8 (30)	433.800

**Таблица кодов 64 тонов CTCSS**

№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)
1	33.0	17	71.9	33	123.0	49	183.5
2	35.4	18	74.4	34	127.3	50	186.2
3	36.6	19	77.0	35	131.8	51	189.9
4	37.9	20	79.7	36	136.5	52	192.8
5	39.6	21	82.5	37	141.3	53	196.6
6	44.4	22	85.4	38	146.2	54	199.5
7	47.5	23	88.5	39	151.4	55	203.5
8	49.2	24	91.5	40	156.7	56	206.5
9	51.2	25	94.8	41	159.8	57	210.7
10	53.0	26	97.4	42	162.2	58	218.1
11	54.9	27	100.0	43	165.5	59	225.7
12	56.8	28	103.5	44	167.9	60	229.1
13	58.8	29	107.2	45	171.3	61	233.6
14	63.0	30	110.9	46	173.8	62	241.8
15	67.0	31	114.8	47	177.3	63	250.3
16	69.4	32	118.8	48	179.9	64	254.1

**Таблица кодов 39 тонов CTCSS**

№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)
1	67.0	11	94.8	21	131.8	31	186.2
2	69.3	12	97.4	22	136.5	32	192.8
3	71.9	13	100.0	23	141.3	33	203.5

4	74.4	14	103.5	24	146.2	34	210.7
5	77.0	15	107.2	25	151.4	35	218.1
6	79.7	16	110.9	26	156.7	36	225.7
7	82.5	17	114.8	27	162.2	37	233.6
8	85.4	18	118.8	28	167.9	38	241.8
9	88.5	19	123.0	29	173.8	39	250.3
10	91.5	20	127.3	30	179.9		

**Таблица кодов 38 тонов CTCSS**

№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)	№	ЧАСТОТА (Гц)
1	67.0	11	97.4	21	136.5	31	192.8
2	71.9	12	100.0	22	141.3	32	203.5
3	74.4	13	103.5	23	146.2	33	210.7
4	77.0	14	107.2	24	151.4	34	218.1
5	79.7	15	110.9	25	156.7	35	225.7
6	82.5	16	114.8	26	162.2	36	233.6
7	85.4	17	118.8	27	167.9	37	241.8
8	88.5	18	123.0	28	173.8	38	250.3
9	91.5	19	127.3	29	179.9		
10	94.8	20	131.8	30	186.2		